### SPECIFICATIONS

SPEC. No. CC - 1160 DATE APR. 2018

# SPECIFICATIONS HYDRAULIC CRANE

**MODEL: UNIC URW376C4ER** 

Specifications are subject to change without notice.

## UNIC CRANE PERFORMANCE MODEL: URW376C4ER

#### **CRANE CAPACITY:**

**LIFTING CAPACITY** : Max 2.93t at 2.5m

**HOOK HEIGHT** 

ABOVE GROUND LEVEL : Max 14.9m

BELOW GROUND LEVEL : Max 18.7m with 4-part line

WORKING RADIUS : Min 0.62m, Max 14.45m

**BOOM:** 6-section box beam type telescoping boom

**Boom Length** 

Retracted boom: 3.63m Extended boom: 14.61m

Boom Extending Speed: 10.98m / 23 s Boom Raising Speed: 0° to 80° / 10 s

WINCH: Hydraulic motor driven, spur gear reduction,

with automatic mechanical brake and wire rope retaining roller.

**Hoisting Speed** 

Single line speed: 68.0m/min at 4th layer

Hook speed: 17.0m/min at 4th layer with 4-part line Hook Block; 2.9t capacity, 2 sheaves with safety latch

Wire Rope

Construction (JIS): IWRC 6 ×WS (26) GRADE B

Diameter X Length: 8mm ×85m

Breaking strength: 42.4kN (4320kgf)

**SLEWING:** Hydraulic motor driven, worm gear reduction, spur

gear reduction, and worm self-locking brake

(supported by ball bearings)

Slewing Range: 360° continuous rotation on a ball bearing race

Slewing Speed: 2.5 rpm

**OUTRIGGERS:** 

Horizontal: A double acting hydraulic cylinder, direct pushing type

(directly connected with hydraulic automatic lock device)

Vertical: A double acting hydraulic cylinder, direct pushing type

(directly connected with hydraulic automatic lock device)

#### **HYDRAULIC SYSTEM:**

Hydraulic Pump

Type: Variable delivery piston pump

Rated pressure: 21.6MPa (220kgf/cm<sup>2</sup>)

Rated delivery: 60 ℓ/min.
Rated revolution: 2500rpm

Hydraulic oil tank: 75 ℓ capacity

Hydraulic Valves

Control valve: Multiple control valve, spring centered,

spool-type, with pressure relief valve

Pressure relief

valve setting: For crawling:21.6MPa (220kgf/cm²)

For crane: 20.6MPa (210kgf/cm<sup>2</sup>)

Counterbalance valve:

Boom raising and boom telescoping cylinders

Pilot-operated

check valve: Outrigger cylinders (Horizontal)

Double pilot-operated

check valve: Outrigger cylinders (Vertical)

Hydraulic Actuators

Hydraulic motors: Hoisting: Axial plunger type

Slewing: Axial plunger type

Hydraulic cylinders: Double acting type

1 × Boom raising cylinder
1 × Boom telescoping cylinder
4 × Outrigger cylinder (Horizontal)
4 × Outrigger cylinder (Vertical)

**CRAWLING GEAR:** 

Crawling: Endless rubber crawler

Crawler: 300 × 52.5× 88

Tread length: 1750mm

Ground contact pressure: 36.3kPa (0.37kgf/cm²)

Crawling speed: 0~3km/h, forward/reverse

Hill climbing ability: 23°

Engine: Rated output: 15.2kW (20.7ps)/2500rpm

Model: 3TNV80F-SNFK

(YANMAR Co., Ltd)

Displacement: 1266 cm<sup>3</sup>

Fuel Type: Diesel Oil

Steering: Hydraulic drive independent of left/right

Parking brake: Disc brake with hydraulic motor built-in

Starter: Starter motor Fuel tank: 40 ℓ capacity

**Note:** The figures in relation to the speed are on the basis of no-load running at rated oil flow condition.

#### **SAFETY DEVICES:**

- 1. Pressure relief valve for hydraulic circuit
- Counterbalance valves for boom raising and boom telescoping cylinders
- 3. Pilot-operated check valves for outrigger cylinders (Horizontal)
- 4. Double pilot-operated check valves for outrigger cylinders (Vertical)
- 5. Boom angle indicator with load indicator
- 6. Hook safety latch
- 7. Automatic mechanical brake for winch
- 8. Automatic stop for overwinding
- 9. Overwinding alarm
- 10. Automatic stop for leaving minimum wire rope
- 11. Emergency stop button
- 12. Inter-lock device of crane and crawling levers
- Inter-lock device of crane and outriggers
   (Option: Outrigger ground contact detector)
- 14. Level
- 15. Three colored lamp
- 16. Headlight

**VOICE MESSAGE:** 

[Remote control active]

[Stop winch up]

[Secure lifting hook]

[Low transmitter battery]

[Service remote control]

[Reset main switch]

[Change control mode]

[Crane mode]

[Outrigger mode Outriggers moving]

[Check error code]

[Control system error]

**DIMENSIONS OF CRANE:** 

4375mm (L) × 1300mm (W) × 1805mm (H)

**MASS OF CRANE:** 

3870kg

**REMOTE CONTROLLER:** (Radio controller model or Cable remote controller model)

Model:

RC-500HA-AUS

System:

Manual/remote control combined system

Control:

1. Selective control

Boom Raise / Lower

(Crane mode/Outrigger mode)

Outrigger Ret / Ext

Hook

Hoist / Lower

(Shock-less ON / OFF)

Outrigger 3 Ret / Ext

Boom

Extend / Retract

(Outrigger Horizontal /Vertical)

Outrigger<sup>2</sup> Ret / Ext

Slewing

C.W / C.C.W

(Eng. start / stop) Outrigger① Ret / Ext

2. Store hook

Hook storage

3. Start/Warning horn

Start radio remote control and

recovered emergency stop/ Horn

4. Speed control lever

Hydraulic control and engine

speed control

5. Mode select

Crane mode/Outrigger mode

(Shock-less ON/OFF) Outrigger horizontal/vertical

(Engine Start / Stop)

6. Speed mode select

High speed mode (normal mode)/

Medium speed mode/Low speed mode

7. Key switch

Transmitter power on-off

8. Emergency-stop switch

Stop function of crane Crawler battery (DC12V)

Power supply:

Controller

Four R03 dry cells (DC6V)

Power consumption:

Transmitter Approx. 50 W

(Single selective operation at maximum operating speed)

Transmitter:

Battery life more than 20 hours (of transmitter operation)

Transmitter weight: Ambient temperature: 700g (with batteries) -20 °C ~ +60 °C

Storage temperature:

-30 °C ~ +75 °C

**RADIO:** (Radio remote controller model)

Radio frequency:

433 ~ 434 MHz Band

Transmitted output power: 10mW

Operating range:

Approx. 100m

Unit address:


Special address combining a frequency and ID code is

assigned to each unit.

#### Caution

In accordance with our policy of constant product improvement, all specifications are subject to change without notice or obligations.

#### **WORKING RANGE:**

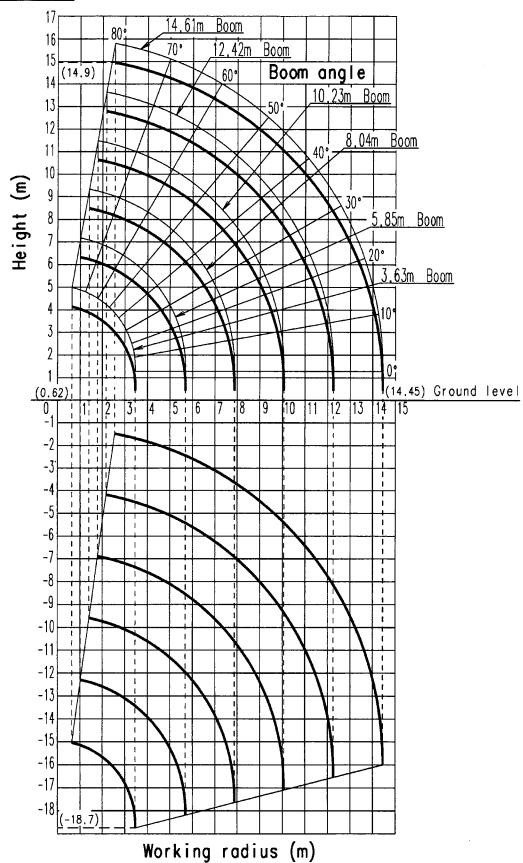

**Note:** The above figures are based on no-load condition and do not include the deflection of the boom.

#### **NET RATED LOADS:**

Boom-sections extended: ①, ①+②

Worl	2.0	2.5	3.0	3.5	4.0	4.5	5.0	5.69	
	Outriggers extended to maximum	2.9	2.9	2.35	1.95	1.67	1.45	1.3	1.07
Net Rated load (t)	Outriggers extended to halfway	2.9	2.9	2.32	1.92	1.57	1.25	0.99	0.77
	Outriggers extended to minimum	2.9	2.9	2.17	1.5	1.12	0.9	0.72	0.47

Boom-sections extended: ①+②+③

Worl	2.7	3.0	3.5	4.0	4.5	5.0	5.5	6.0	7.0	7.88	
	Outriggers extended to maximum	2.24	2.09	1.65	1.4	1.22	1.07	0.95	0.84	0.69	0.59
Net Rated load ( t )	Outriggers extended to halfway	2.24	2.06	1.65	1.39	1.17	1.0	0.82	0.64	0.45	0.37
	Outriggers extended to minimum	2.24	2.06	1.57	1.22	1.02	0.83	0.65	0.51	0.3	0.19

Boom-sections extended: 1+2+3+4

Worl	4.0	4.5	5.0	6.0	7.0	8.0	9.0	10.07	
	Outriggers extended to maximum	1.04	0.93	0.84	0.73	0.62	0.52	0.47	0.38
Net Rated load (t)	Outriggers extended to halfway	1.03	0.92	0.83	0.67	0.5	0.38	0.28	0.2
	Outriggers extended to minimum	1.03	0.82	0.64	0.47	0.31	0.22	0.13	0.09

Boom-sections extended: ①+②+③+④+⑤

Worl	4.5	5.0	6.0	7.0	8.0	9.0	10.0	11.0	12.26			
Net Rated load ( t )	Outriggers extended to maximum	0.75	0.62	0.48	0.39	0.34	0.3	0.27	0.24	0.23		
	Outriggers extended to halfway	0.75	0.62	0.48	0.39	0.32	0.27	0.22	0.17	0.13		
	Outriggers extended to minimum	0.75	0.62	0.4	0.25	0.18	0.13	0.09	0.06	0.01		

Boom-sections extended: 1+2+3+4+5+6

Working radius (m)		4.9	5.5	6.0	7.0	8.0	9.0	10.0	11.0	12.0	13.0	14.45
	Outriggers extended to maximum	0.3	0.27	0.25	0.22	0.2	0.18	0.16	0.14	0.13	0.11	0.1
Net Rated load (t)	Outriggers extended to halfway	0.3	0.27	0.25	0.22	0.2	0.18	0.16	0.12	0.09	0.06	0.04
	Outriggers extended to minimum	0.3	0.27	0.25	0.22	0.17	0.11	0.08	0.05	0.03	0.02	0.01

#### **CAUTION**

- 1. Net rated loads are performance when the crane is placed level and is based on an actual working radius including boom deflection under load.
  - Rated loads are also based on the strength of the crane and the stability of the crawler.
- 2. Rated loads must be reduced in accordance with wind, ground condition and operating speed.
- 3. The mass of hook, slings, and any accessories to the boom or load line must be deducted from the rated load in the chart.
- 4. When the outriggers are set without extending to their maximum, stability of the crane deteriorates remarkably.
  - Pay attention that the rated loads are changed according to how far the outriggers are extended.
- 5. If any one of the four outriggers is not fully extended, operate with performance of not maximum extension.
- 6. In order to make correct operation, read the instruction manual carefully before crane operation.

#### **FLY JIB:(OPTION)**

LIFTING CAPACITY:

710kg

JIB LENGTH:

2.0m

TILT ANGLE:

0°,20°,40°,60°

MASS OF FLY JIB:


95kg


#### **NET RATED LOADS:**(FOR FLY JIB)

						TILT A	NGLE							
	1st TC	4th BO	OM SEC	TIONS	ONL)	Y 5th BO	OM SEC	TION	ONLY 6th BOOM SECTION					
BOOM ANGLE	0°	20°	40°	60°	0°	20°	40°	60°	0°	20°	40°	60°		
80°	700	700	700	700	450	450	450	450	150	150	150	150		
75°	700	700	700	700	450	450	400	400	150	150	150	150		
70°	500	500	400	400	300	300	200	200	100	100	100	100		
65°	350	350	200	200	150	150								
60°	200	200	100	100										
55°	100	100												
50°					DDOU	IBITED		IBITED						
40°	DDOU	IBITED		IBITED	AR			EA RANE	PROHIBITED AREA OF CRANE OPERATIONS					
30°	AR		AR OF C	EA RANE	OF C			ATIONS		JI W W I C				
20°	OF CRANE			ATIONS	OPERA	ATIONS								
10°	OPERATIONS													
0°									·					

#### **CAUTION**


- 1. Net rated loads are performance when outriggers extended to maximum.
- 2. Net rated loads are performance when the crane is placed level and is based on an actual working radius including boom deflection under loaded.
  - Net rated loads are also based on strength and stability of the crane.
- 3. Net rated loads must be reduced in accordance with wind, ground condition and operating speed.
- 5. The mass of the slings and any accessories attached to the boom or load line must be deducted from the above net rated loads in the chart.
- 6. In order to make correct operation, read the instruction manual carefully before crane operation.

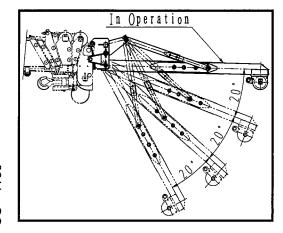


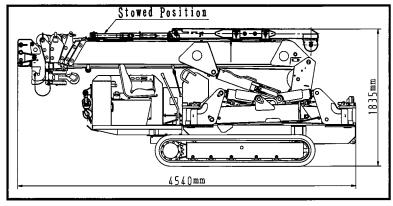

#### **WORKING RANGE:**

(FOR FLY JIB)

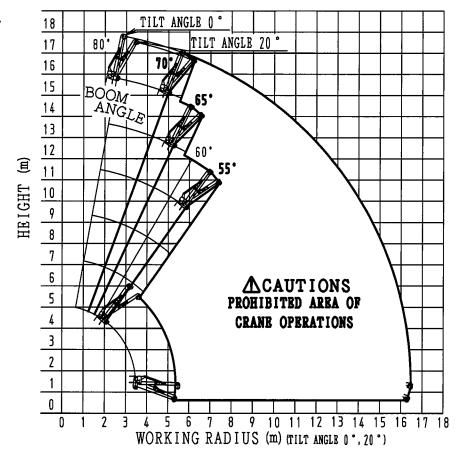

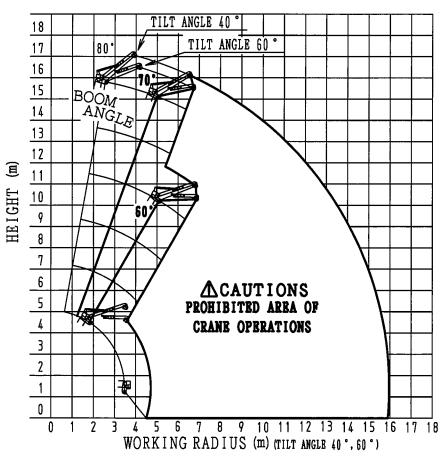

**Note:** The above figures are based on no-load condition and do not include the deflection of the boom.

#### **FLY JIB-SEARCHER HOOK: (OPTION)**

LIFTING CAPACITY:

700kg

SEARCHER HOOK LENGTH:

2.0m

TILT ANGLE:

0°,20°,40°,60°

MASS OF SEARCHER HOOK


8kg (Bracket and jib are excepted)


#### **NET RATED LOADS:** (FOR FLY JIB-SEARCHER HOOK)

1st 7	ΓΟ 4th BO	OM SECTI	ONS	ON	ILY 5th BO	OM SECTI	ON	ONLY 6th BOOM SECTION					
	NET R	RATED LOA	AD(kg)		NET F	RATED LOA	AD(kg)		NET RATED LOAD(kg)				
WIRKING RADIUS (m)	OUTRIG. EXT. TO MAX.	OUTRIG. EXT. TO HALF.	OUTRIG. EXT. TO MIN.	WIRKING RADIUS (m)	OUTRIG. EXT. TO MAX.	OUTRIG. EXT. TO HALF.	OUTRIG. EXT. TO HALF.	WIRKING RADIUS (m)	OUTRIG. EXT. TO MAX.	OUTRIG. EXT. TO HALF.	OUTRIG. EXT. TO MIN.		
4.5	700	700	700	4.0	450	450	450	5.0	150	150	150		
5.0	500	500	450	5.0	400	400	400	5.5	150	150	150		
6.0	400	400	300	6.0	300	300	200	6.0	130	130	130		
7.0	350	300	100	7.0	250	250	100	7.0	100	100	100		
8.0	300	200		8.0	200	200		8.0					
9.0	250	100	PROHIBITED	9.0	150	150		9.0					
10.0	150	PROHIBITED	AREA OF CRANE	10.0	130	100	PROHIBITED	10.0					
11.0	100	AREA OF CRANE	OPERATION	11.0	100		AREA OF CRANE	11.0	DDOLL	IDITED AD	- 4 0-		
12.1	PROHIBITED AREA	OPERATION		12.0	PROHIBITED	PROHIBITED AREA OF	OPERATION	12.0		IBITED AR NE OPERA			
				13.0	AREA OF CRANE	CRANE OPERATION		13.0	01011	12 01 210			
				14.2	OPERATION	PERATION		14.0					
								15.0					
								16.4					

#### **CAUTION**

- 1. Net rated loads are performance when the crane is placed level and is based on an actual working radius including boom deflection under loaded.
  - Net rated loads are also based on strength and stability of the crane.
- 2. Net rated loads must be reduced in accordance with wind, ground condition and operating speed.
- 3. The mass of the slings and any accessories attached to the boom or load line must be deducted from the above net rated loads in the chart.
- 4. In order to make correct operation, read the instruction manual carefully before crane operation.
- 5. Do not use the main hook when using the searcher hook.

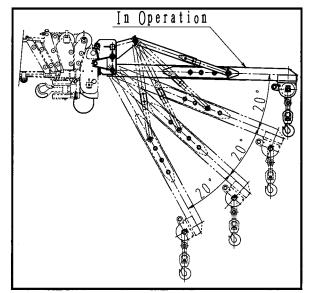

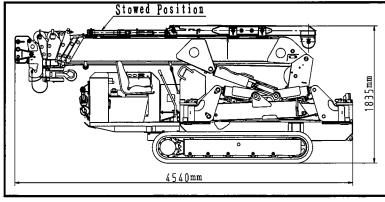

- 1160

#### **SEARCHER HOOK:(OPTION)**

LIFTING CAPACITY: 500kg SEARCHER HOOK LENGTH: 0.8m

TILT ANGLE: 0° ,20° ,40° ,60°


MASS OF SEARCHER HOOK: 20kg


#### **NET RATED LOADS:** (FOR SEARCHER HOOK)


1s	t TO 5th BOO	OM SECTIO	NS	(	ONLY 6th BO	OOM SECTION	1
	NET	RATED LO	AD (kg)		NET	RATED LOA	ND (kg)
WORKING RADIUS (m)	OUTRIG. EXT. TO MAX.	OUTRIG. EXT. TO HALF.	OUTRIG. EXT. TO MIN.	WORKING RADIUS (m)	OUTRIG. EXT. TO MAX.	OUTRIG. EXT. TO HALF.	OUTRIG. EXT. TO MIN.
2.0	500	500	500	2.0	280	280	280
3.0	500	500	500	3.0	280	280	280
4.0	500	500	500	4.0	280	280	280
5.0	500	500	500	5.0	250	250	250
6.0	420	420	350	6.0	220	220	220
7.0	340	340	200	7.0	190	190	170
8.0	290	270	130	8.0	170	150	120
9.0	250	200	80	9.0	150	120	80
10.0	220	150	50	10.0	130	100	50
11.0	200	110		11.0	110	70	
12.0	180	80	PROHIBITED AREA OF CRANE OPERATION	12.0	100	50	
13.06	160	60		13.0	80		PROHIBITED AREA OF CRANE OPERATION
	•			14.0	70	PROHIBITED AREA OF CRANE OPERATION	EA COMMON
				15.25	50		


#### **CAUTION**

- 1. Net rated loads are performance when the crane is placed level and is based on an actual working radius including boom deflection under loaded.
  - Net rated loads are also based on strength and stability of the crane.
- 2. Net rated loads must be reduced in accordance with wind, ground condition and operating speed.
- 3. The mass of the slings and any accessories attached to the boom or load line must be deducted from the above net rated loads in the chart.
- 4. In order to make correct operation, read the instruction manual carefully before crane operation.
- 5. Do not use the main hook when using the searcher hook.

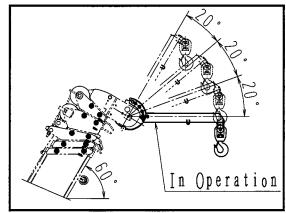

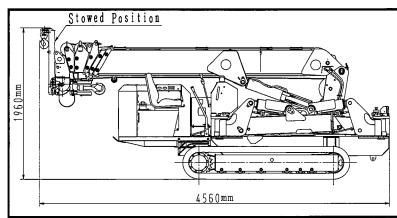

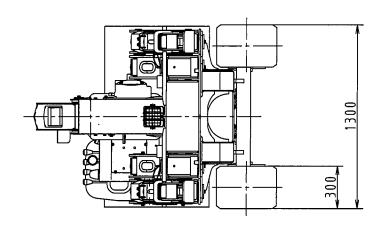

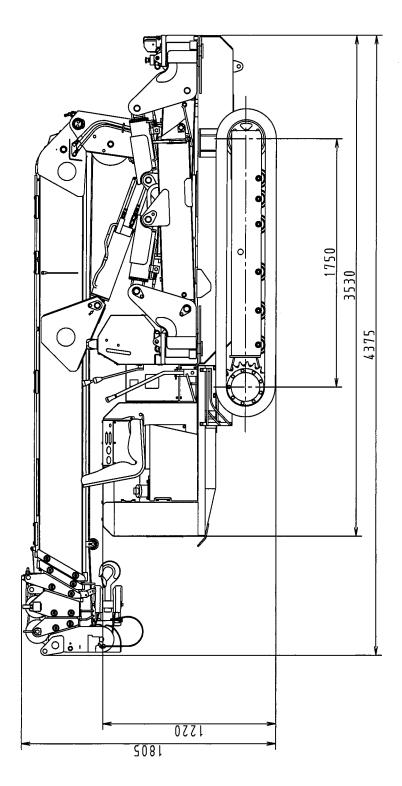

CC - 1160